



Product Description

MASTER HPI Plus

Quartz metal halide lamps with opalized outer bulb

Benefits

- High safety and comfort level, maintained over life
- Minimal maintenance cost
- Initial investment saving options with "Plus"-concept and "S" and "P"-types
- Adjustable atmosphere creation by using appropriate colour temperature

Features

- Ovoid, internally white coated outer bulb
- Unique 3-band technology resulting in high luminous efficacy, both initially and over long lifetime
- Available in cool white and daylight colour appearance demonstrating good colour stability
- "S"-type for direct retrofit for HPL lamps
- "P"-type for use without protective front shield

Application

- High bay lighting, e.g. industrial workshops, exhibition halls, hypermarkets, shopping malls, DIY stores, churches, airports and train stations

Warnings and Safety

- Use only in totally enclosed luminaire, even during testing (IEC61167, IEC 62035, IEC60598)
- The luminaire must be able to contain hot lamp parts if the lamp ruptures
- For use with control gear designed for high-pressure mercury or sodium lamps
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.


MASTER HPI Plus

Versions



HPI Plus, E40

Dimensional drawing

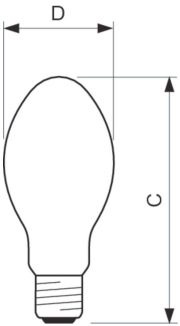

Product	D (max)	C (max)
MASTER HPI Plus 250W/645 BU E40 1SL/12	91 mm	226 mm

