



# TownGuide Performer

## BDP100 LED60/740 II DS PCC SI LS-6 62P

TOWNGUIDE PERF FLAT CONE - LED module 6000 lm -  
 Distribution symmetrical - Polycarbonate bowl/cover clear -  
 LumiStep dimming 6 hours - Post-top for diameter 62 mm

The TownGuide Performer family consists of six recognizable yet modern shapes: Flat Cone, Bowl, Classic Cone, Classic, T and Tzero. All are available with a clear bowl. Except for Tzero, also a frosted bowl can be chosen. With an extensive range of lumen packages and a choice of light colors and operating lifetimes, it is easy to select the version that best suits your project's specific requirements. In addition, TownGuide Performer has a variety of control system options that can make it an integral part of your smart energy-reduction programs – from stand-alone LumiStep and DynaDimmer, SDU switch-dim control, through to seamless remote connectivity with CityTouch lighting management software. Installation is easy. Thanks to the bayonet whistle connector with integrated gland located in the spigot, the luminaire does not have to be opened at all for installation. Philips has made every effort to make the Total Cost of Ownership (TCO) of the luminaire as attractive as possible. And as TownGuide Performer is a dedicated LED luminaire, compatible with a variety of control systems, the energy and maintenance cost savings compared to conventional lighting are significant.

### Product data

General Information		Driver included	Yes
Number of light sources	4 [ 4 pcs]	Optical cover/lens type	PCC [ Polycarbonate bowl/cover clear]
Lamp family code	LED60 [ LED module 6000 lm]	Luminaire light beam spread	75°
Light source color	740 neutral white	Embedded control	LS-6 [ LumiStep dimming 6 hours]
Light source replaceable	Yes	Control interface	-
Number of gear units	1 unit	Light regulation	Dimming via DynaDimmer integrated in ballast or driver
Driver/power unit/transformer	PSDD [ Power supply unit with DynaDimmer]		

# TownGuide Performer

Connection	Screw connection block 5-pole
Cable	-
Protection class IEC	Safety class II (II)
Parts color	All parts colored
Coating	-
Glow-wire test	650/5 [ Temperature 650 °C, duration 5 s]
Flammability mark	NO [-]
Safety device	PCBC [ PCB cover]
CE mark	CE mark
ENEC mark	ENEC mark
Warranty period	5 years
Optic type outdoor	Distribution symmetrical
Photocell	No [-]
Constant light output	No
Number of products on MCB of 16 A type B	10
EU RoHS compliant	Yes
WEEE mark	-
Light source engine type	LED
Service tag	Yes
Serviceability class	Class A, luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge protection device, optics, front cover and mechanical parts
Product family code	BDP100 [ TOWNGUIDE PERF FLAT CONE]

## Light Technical

Upward light output ratio	3
Standard tilt angle posttop	0°
Standard tilt angle side entry	-

## Operating and Electrical

Input Voltage	220-240 V
Input Frequency	50 to 60 Hz
Inrush current	45 A
Inrush time	0.285 ms
Power Factor (Min)	0.95
Power Factor (Nom)	0.97

## Controls and Dimming

Dimmable	Yes
----------	-----

## Mechanical and Housing

Housing Material	Aluminum
Reflector material	-
Optic material	Acrylate
Optical cover/lens material	Polycarbonate
Fixation material	Steel
Mounting device	62P [ Post-top for diameter 62 mm]

Optical cover/lens shape	Conical flat
Optical cover/lens finish	Clear
Torque	15
Overall height	209 mm
Overall diameter	570 mm
Effective projected area	0.051 m <sup>2</sup>
Color	Silver
Dimensions (Height x Width x Depth)	209 x NaN x NaN mm (8.2 x NaN x NaN in)

## Approval and Application

Ingress protection code	IP66 [ Dust penetration-protected, jet-proof]
Mech. impact protection code	IK10 [ 20 J vandal-resistant]
Surge Protection (Common/Differential)	Luminaire surge protection level until 6 kV differential mode and 6 kV common mode

## Initial Performance (IEC Compliant)

Initial luminous flux (system flux)	4500 lm
Luminous flux tolerance	+/-7%
Initial LED luminaire efficacy	115 lm/W
Init. Corr. Color Temperature	4000 K
Init. Color Rendering Index	70
Initial chromaticity	(0.38, 0.38) SDCM <5
Initial input power	39 W
Power consumption tolerance	+/-11%
Init. Color Rendering Index Tolerance	+/-2

## Over Time Performance (IEC Compliant)

Control gear failure rate at median useful life 100000 h	10 %
Lumen maintenance at median useful life* 100000 h	95

## Application Conditions

Ambient temperature range	-40 to +35 °C
Performance ambient temperature Tq	25 °C
Maximum dim level	50%


## Product Data

Full product code	871829191004600
Order product name	BDP100 LED60/740 II DS PCC SI LS-6 62P
EAN/UPC - Product	8718291910046
Order code	91004600
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	1
Material Nr. (12NC)	910500991064
Net Weight (Piece)	6.480 kg




# TownGuide Performer

## Dimensional drawing

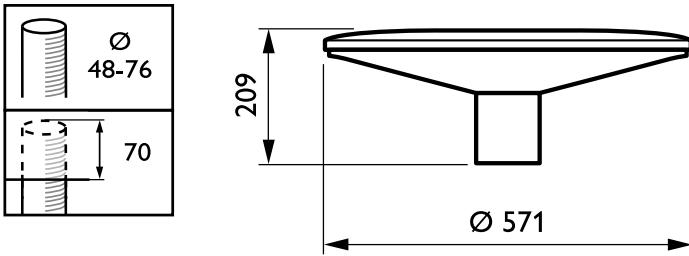


TownGuide Performer BDP100-105

## Photometric data

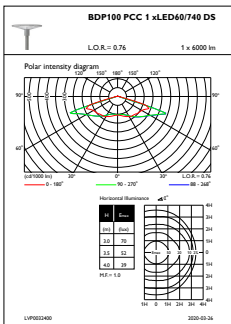

OFPL1\_BDP100PCC1xLED60740DS

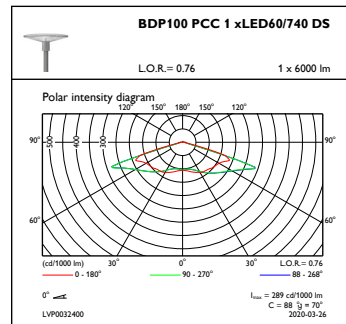

OFPC1\_BDP100PCC1xLED60740DS

