



# LumiStreet gen2

## BGP291 LED25-4S/740 II DM11 CLO S05Z1Z1-

LUMISTREET GEN2 MICRO - LED Module 2500 lm - 740 neutral white - Safety class II (II) - Distribution medium 11 - Post-top for diameter 48 mm

Increasing numbers of municipalities are having to upgrade large-scale conventional street lighting installations with energy efficient LED technology. But they are having to do this with smaller and smaller budgets. That's why the new generation of LumiStreet has been upgraded and designed to provide a solution to this challenge, it is the ideal solution for performing point-to-point replacement of conventional lighting. ;LumiStreet gen2 achieves this by offering high efficiency, low Total Cost of Ownership, and ease of installation and maintenance. The ease of installation and maintenance is enabled by the Philips Service tag. Moreover, the Philips SR (System Ready) socket makes it future-ready and you can pair this luminaire with lighting control and software applications such as Interact City.

### Product data

General information		Cable	Cable 10 m without plug (C10K)
Lamp family code	LED25 [ LED Module 2500 lm]	Protection class IEC	Safety class II (II)
Light source color	740 neutral white	Flammability mark	F [ For mounting on normally flammable surfaces]
Light source replaceable	Yes	CE mark	CE mark
Number of gear units	1 unit	ENEC mark	ENEC plus mark
Driver/power unit/transformer	PSR-CLO [ Power supply unit regulating with constant light output]	Warranty period	5 years
Driver included	Yes	Optic type outdoor	Distribution medium 11
Optical cover/lens type	FG [ Flat glass]	Remarks	* At extreme ambient temperatures the luminaire might automatically dim down to protect components
Luminaire light beam spread	160° - 42° x 54°	Constant light output	Yes
Control interface	-		
Connection	2 Push-in connector 5-pole		

# LumiStreet gen2

Number of products on MCB of 16 A type B	29
EU RoHS compliant	Yes
Light source engine type	LED
Service tag	Yes
Serviceability class	Class A, luminaire is equipped with serviceable parts (when applicable): LED board, driver, control units, surge protection device, optics, front cover and mechanical parts
Product family code	BGP291 [ LUMISTREET GEN2 MICRO]

## Light technical

Upward light output ratio	0
Standard tilt angle posttop	0°
Standard tilt angle side entry	0°

## Operating and electrical

Input Voltage	220 to 240 V
Input Frequency	50 to 60 Hz
Initial CLO power consumption	15.8 W
Average CLO power consumption	16 W
End CLO power consumption	16.2 W
Inrush current	15 A
Inrush time	0.295 ms
Power Factor (Min)	0.99

## Controls and dimming

Dimmable	No
----------	----

## Mechanical and housing

Housing Material	Aluminum die-cast
Reflector material	Polycarbonate
Optic material	Polymethyl methacrylate
Optical cover/lens material	Glass
Fixation material	Aluminum
Mounting device	48P [ Post-top for diameter 48 mm]
Optical cover/lens shape	Flat
Optical cover/lens finish	Clear
Overall length	520 mm
Overall width	234 mm
Overall height	95 mm
Effective projected area	0.0235 m <sup>2</sup>
Color	Gray

Dimensions (Height x Width x Depth)	95 x 234 x 520 mm (3.7 x 9.2 x 20.5 in)
-------------------------------------	---

## Approval and application

Ingress protection code	IP66 [ Dust penetration-protected, jet-proof]
Mech. impact protection code	IK08 [ 5 J vandal-protected]
Surge Protection (Common/Differential)	Luminaire surge protection level until 6 kV differential mode and 8 kV common mode
Sustainability rating	-

## Initial performance (IEC compliant)

Initial luminous flux (system flux)	2136 lm
Luminous flux tolerance	+/-7%
Initial LED luminaire efficacy	135 lm/W
Init. Corr. Color Temperature	4000 K
Init. Color Rendering Index	70
Initial chromaticity	(0.381, 0.379) SDCM <5
Initial input power	15.8 W
Power consumption tolerance	+/-10%
Init. Color Rendering Index Tolerance	+/-2

## Over time performance (IEC compliant)

Control gear failure rate at median useful life 100000 h	10 %
Lumen maintenance at median useful life* 100000 h	L100

## Application conditions

Ambient temperature range	-40 to +50 °C
Performance ambient temperature Tq	25 °C
Maximum dim level	0% (digital)


## Product data

Full product code	871951410192000
Order product name	BGP291 LED25-4S/740 II DM11 CLO S05Z1Z1-
EAN/UPC - Product	8719514101920
Order code	10192000
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	1
Material Nr. (12NC)	910925866929
Net Weight (Piece)	5.000 kg



# LumiStreet gen2

## Dimensional drawing

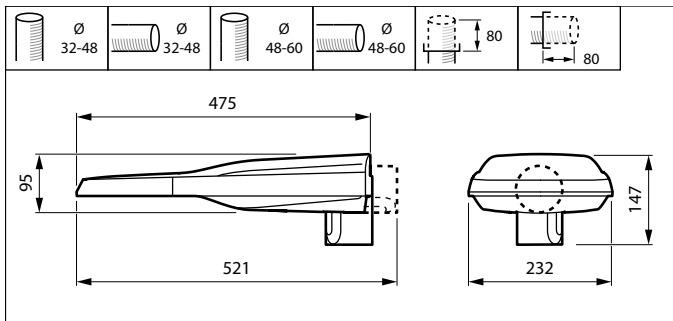

BGP291 LED25-4S/740 II DM11 CLO S05Z1Z1-

