



MASTER TL5 High Efficiency Eco

MASTER TL5 HE Eco 32=35W/840 UNP/40

This extremely efficient TL5 lamp (tube diameter 16 mm) saves considerable energy by simple lamp-for-lamp replacement. The TL5 HE Eco lamp offers excellent lumen maintenance and color rendering. Application areas vary from offices and industry to schools and retail environments.

Warnings and Safety

- A reduction in energy consumption is only achieved with current-controlled gear.
- The lamps operate perfectly with power-controlled gear, but in that case the light output can be up to 10% higher.
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

Product data


General Information		Luminous Flux (Rated) (Nom)	
Cap-Base	G5 [G5]		3250 lm
Life to 50% Failures Preheat (Nom)	25000 h	Colour Designation	Cool White (CW)
Features	na [Not Applicable]	Luminous Efficacy (@ Max Lumen, Rated) (Nom)	114 lm/W
LSF Preheat 2000 h Rated	99 %	Colour Temperature, horizontal (Nom)	4000 K
LSF Preheat 4000 h Rated	99 %	Luminous Efficacy (rated) (Nom)	103 lm/W
LSF Preheat 6000 h Rated	99 %	Colour Rendering Index horiz (Max)	85
LSF Preheat 8000 h Rated	99 %	Colour Rendering Index horiz (Min)	80
LSF Preheat 16000 h Rated	99 %	Colour Rendering Index horiz (Nom)	82
LSF Preheat 20000 h Rated	94 %	Depreciation 2000 hrs	96 %
		LLMF 4000 h Rated	95 %
		Depreciation 5000 hrs	94 %
		LLMF 8000 h Rated	93 %
		LLMF 12000 h Rated	92 %
Light Technical			
Colour Code	840 [CCT of 4000K]		
Luminous Flux (Nom)	3650 lm		

MASTER TL5 High Efficiency Eco

LLMF 16000 h Rated	91 %
LLMF 20000 h Rated	90 %
Operating and Electrical	
Power (Rated) (Nom)	31.7 W
Lamp Current (Nom)	0.170 A
Temperature	
Design Temperature (Nom)	35 °C
Controls and Dimming	
Dimmable	Yes
Approval and Application	
Energy Efficiency Label	A+
Mercury (Hg) Content (Nom)	1.4 mg

Energy Consumption kWh/1000 h	35 kWh
Product Data	
Full product code	872790082593000
Order product name	MASTER TL5 HE Eco 32=35W/840 UNP/40
EAN/UPC - Product	8711500880031
Order code	82593000
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	40
Material Nr. (12NC)	927991184031
Net Weight (Piece)	127.400 g
ILCOS Code	FDH-32/40/1B-L/P-G5-16/1450


Dimensional drawing

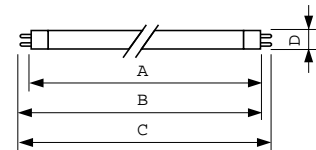


Product	D (max)	A (max)	B (max)	B (min)	C (max)
MASTER TL5 HE Eco 32=35W/840 UNP/40	17 mm	1449.0 mm	1456.1 mm	1453.7 mm	1463.2 mm

TL5 HE Eco 32=35W/840

Photometric data

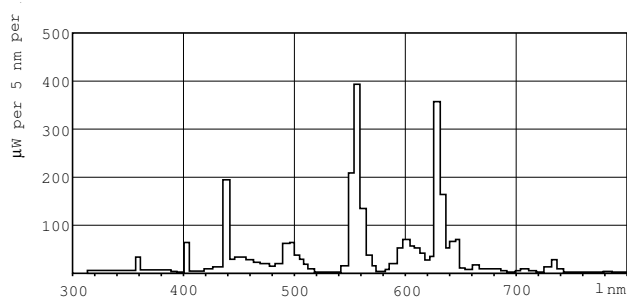


Lightcolour /840

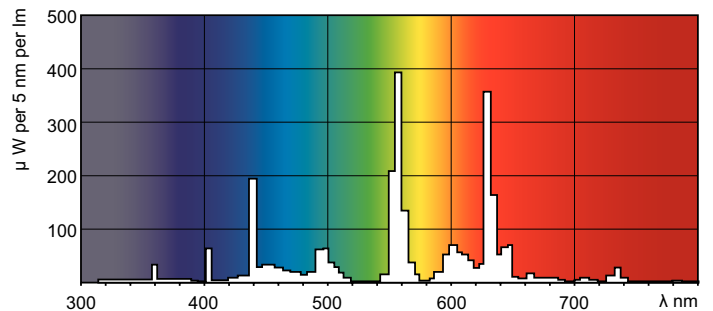

Lightcolour /840


MASTER TL5 High Efficiency Eco

Lifetime



LDLE_TL5HEECO_0001-Life expectancy diagram

LDLE_TL5HEECO_0002-Life expectancy diagram

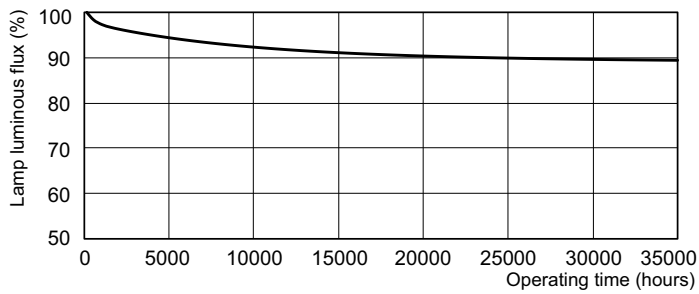

LDLM_TL5HEECO_0001-Lumen maintenance diagram

