



MASTER TL5 High Output Eco

MASTER TL5 HO Eco 45=49W/830 UNP/40

This extremely efficient TL5 lamp (tube diameter 16 mm) saves considerable energy by simple lamp-for-lamp replacement. The TL5 HO Eco lamp is optimized for installations requiring high light output and offers excellent lumen maintenance and color rendering. Application areas vary from offices and industry to schools and retail environments.

Warnings and Safety

- A reduction in energy consumption is only achieved with current-controlled gear.
- The lamps operate perfectly with power-controlled gear, but in that case the light output can be up to 10% higher.
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

Product data

General Information		Luminous Flux (Nom)	
Cap-Base	G5 [G5]	Luminous Flux (Rated) (Nom)	4100 lm
Life to 50% Failures Preheat (Nom)	30000 h	Colour Designation	Warm White (WW)
Features	na [Not Applicable]	Luminous Efficacy (@ Max Lumen, Rated) (Nom)	108 lm/W
LSF Preheat 2000 h Rated	99 %	Colour Temperature, horizontal (Nom)	3000 K
LSF Preheat 4000 h Rated	99 %	Luminous Efficacy (rated) (Nom)	92 lm/W
LSF Preheat 6000 h Rated	99 %	Colour Rendering Index horiz (Max)	85
LSF Preheat 8000 h Rated	99 %	Colour Rendering Index horiz (Min)	80
LSF Preheat 16000 h Rated	99 %	Colour Rendering Index horiz (Nom)	82
LSF Preheat 20000 h Rated	94 %	Depreciation 2000 hrs	96 %
Light Technical		LLMF 4000 h Rated	95 %
Colour Code	830 [CCT of 3000K]	Depreciation 5000 hrs	94 %

MASTER TL5 High Output Eco

LLMF 8000 h Rated	93 %
LLMF 12000 h Rated	92 %
LLMF 16000 h Rated	91 %
LLMF 20000 h Rated	90 %

Operating and Electrical

Power (Rated) (Nom)	44.6 W
Lamp Current (Nom)	0.260 A

Temperature

Design Temperature (Nom)	35 °C
--------------------------	-------

Controls and Dimming

Dimmable	Yes
----------	-----

Approval and Application

Energy Efficiency Label	A+
-------------------------	----

Mercury (Hg) Content (Nom)	1.4 mg
Energy Consumption kWh/1000 h	50 kWh

Product Data


Full product code	872790082594700
Order product name	MASTER TL5 HO Eco 45=49W/830 UNP/40
EAN/UPC - Product	8711500880062
Order code	82594700
Numerator - Quantity Per Pack	1
Numerator - Packs per outer box	40
Material Nr. (12NC)	927991783031
Net Weight (Piece)	127.400 g
ILCOS Code	FDH-45/30/1B-L/P-G5-16/1450

Dimensional drawing


Product	D (max)	A (max)	B (max)	B (min)	C (max)
MASTER TL5 HO Eco 45=49W/830 UNP/40	17 mm	1449.0 mm	1456.1 mm	1453.7 mm	1463.2 mm

TL5 HO Eco 45=49W/830

Photometric data

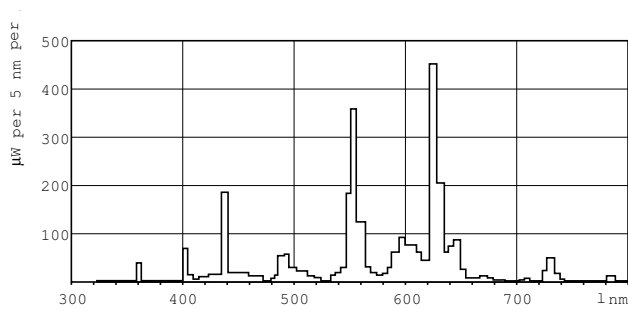

Lightcolour /830

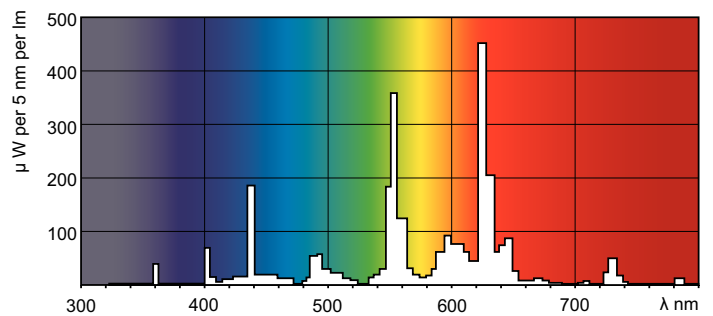

Lightcolour /830

MASTER TL5 High Output Eco

Lifetime



LDLE_TL5ECO_0001-Life expectancy diagram

LDLE_TL5ECO_0002-Life expectancy diagram



LDLM_TL5ECO_0001-Lumen maintenance diagram

